

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #QUN-1501-MK-TG




All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need – 1 Med. Type T Bulb
 40 Watts Recommended 60 Watts Max
 USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DAMP RATED

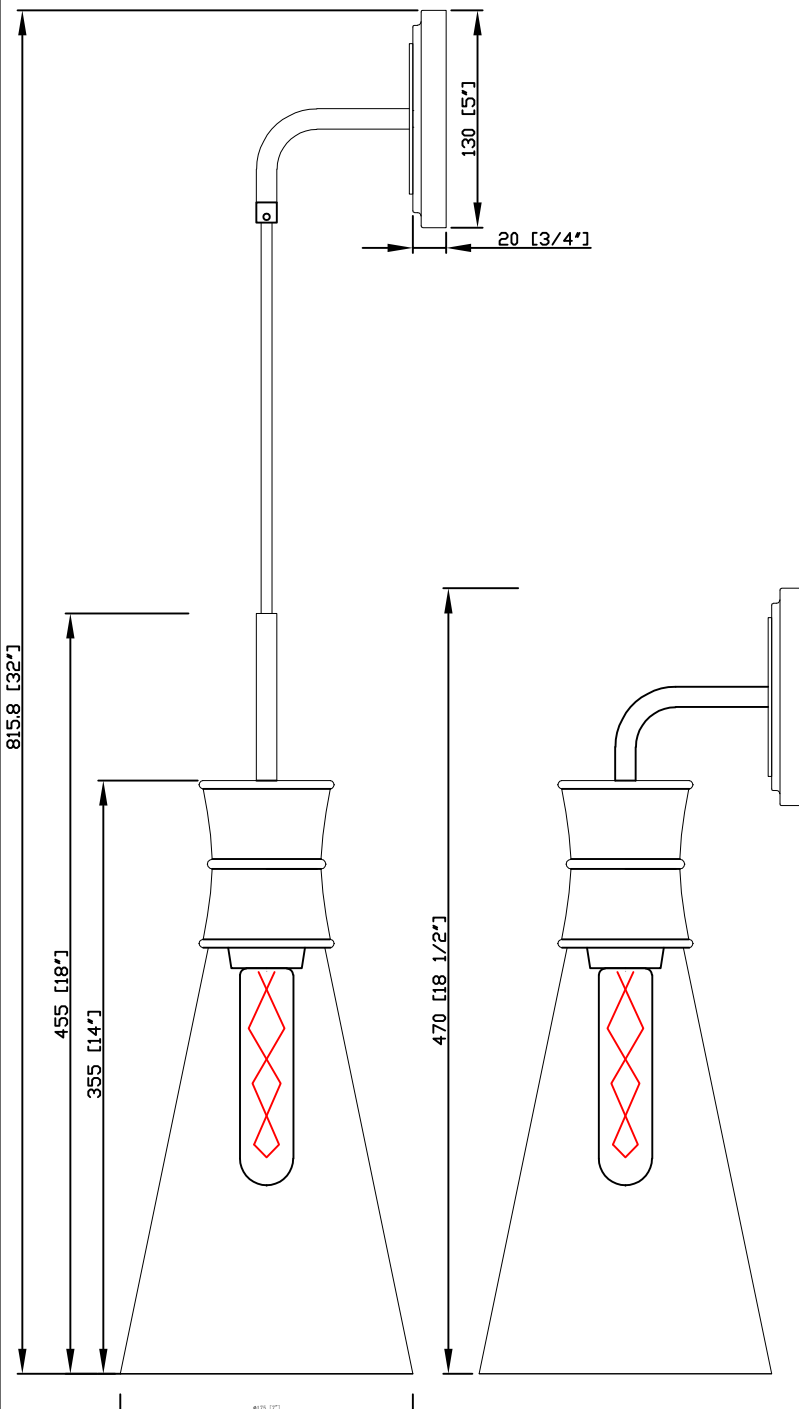

How to Install

For Cord hung

1. Install the mounting plate onto the outlet box.
2. Loosen the set screw on the strain&relief bushing to adjust the flexible cord to the desired length. Tighten it to secure. Do not overtighten it to prevent the cord from being damaged.
3. Install the frame onto the mounting plate and secure with the screws.
4. Place the glass shade over the socket and secure with the socket ring.

For Hard wired

1. Install the mounting plate onto the outlet box.
2. Loosen the set screw on the strain&relief bushing to pull flexible cord out of the backplate. Remove the rod from the frame and the strain&relief bushing from the arm by unscrewing it. Run the cord back through the backplate and tighten the frame onto the arm by twisting it. Cut the extra cord if necessary but leave at least 8" length.
3. Install the frame onto the mounting plate and secure with the screws.
4. Place the shade over the socket and secure with the socket ring.



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #QUN-1501-MK-TG

Part Number

Part Number

Part Number

- A. (1) Mounting hardware
- B. (2) Screws
- C. (1) Back plate Ø5" * H0.75"
XAR1501MKTGBKP5IN
- D. (1) Strain & relief bushing
- E. (1) Flexible cord
- F. (1) Rod Ø0.5" * 4"
- G. (1) Frame
- H. (1) Glass Ø7" * H10.5"
XAR1500GLA7IN
- I. (1) Socket ring

